

# NUT Quickstart




[www.activeaudio.fr](http://www.activeaudio.fr)  
[info@activeaudio.fr](mailto:info@activeaudio.fr)


Tel +33 (0)2 40 46 66 64  
 Fax +33 (0)2 40 92 39 91

©2013 Active Audio  
 332 Bd Marcel Paul, CP602  
 44806 Saint-Herblain Cedex - France

## NUT processor front panel

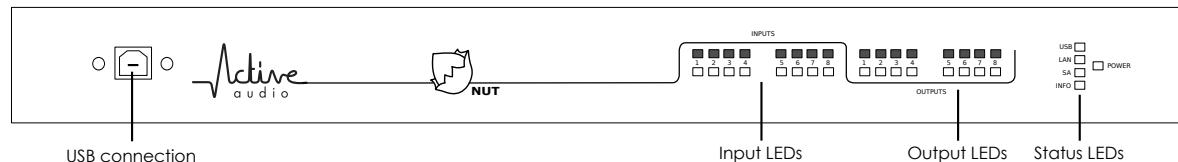


## NUT processor rear panel

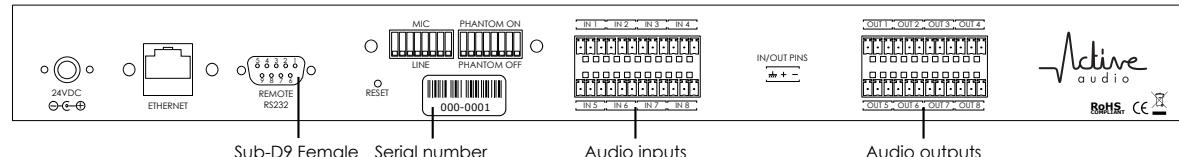

## Technical Data

Inputs	8 balanced analog inputs, with switchable mic / line level and phantom power
Outputs	8 balanced analog outputs
Control	Application based control through: driverless USB 2.0, Ethernet
Dynamic range	114dB
Power	24 VDC power supply
Dimensions	44 x 480 x 251 mm - Rack 19" - 1U
Input / output levels	Balanced 8Vrms (+20 dBu)
Audio connectors	Euroblock
Weight	3,5kg
Sample frequency	48 to 192kHz
Signal processing	Large choice of apps available

## Accessories (included)

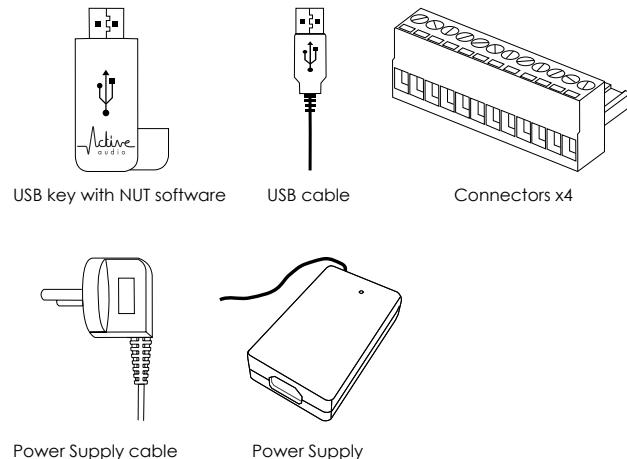


# NUT User Quickstartguide




[www.activeaudio.fr](http://www.activeaudio.fr)  
[info@activeaudio.fr](mailto:info@activeaudio.fr)

Tel +33 (0)2 40 46 66 64  
Fax +33 (0)2 40 92 39 91

©2013 Active Audio  
332 Bd Marcel Paul, CP602  
44806 Saint-Herblain Cedex - France

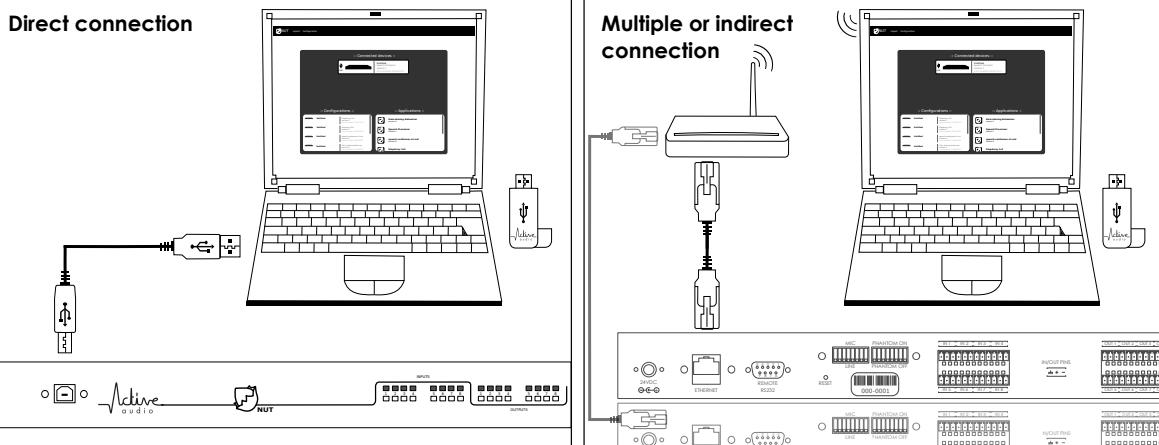

## Microphone wiring

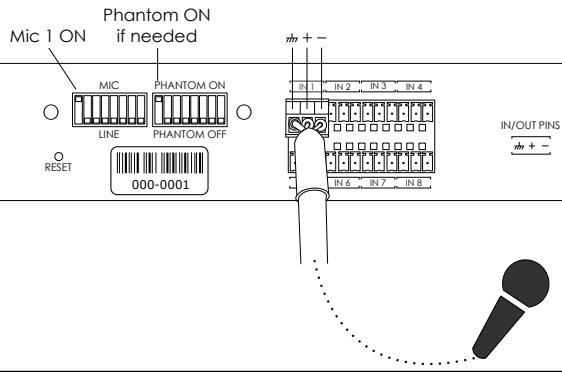

## Cabling RS232

Pin assignment

- RX → 2
- TX → 3
- GND → 5

